

SOS LIGHT START UP NOTIFICATION

During our quality control process, we discovered that certain brands of batteries may affect the initiation process of our light. We have determined that this in no way impacts the performance of our light but may cause some confusion at start up. Battery technology is constantly changing and we are making the necessary adjustments to our electronics to handle these changes.

Below are 3 videos that illustrates how the light performs with different types and strength of battery.

Video #1 shows how the light starts up when you use recommended fresh batteries, like Duracell Coppertop, Energizer, Panasonic, or other standard batteries. These batteries will deliver optimal performance and run time.

Video #2 shows how our “low battery indicator” works. This is useful during the season to be sure your batteries are strong enough to power the light per the CG recommendations.

Video #3 shows how the light initiates when you use either Duracell Procell or Energizer Max batteries. The new battery chemistry of these higher output batteries may result in a false low battery alert, when you press the “On” button. Once this flashing cycles through the unit will stabilize and operate normally in the S-O-S pattern.

Note: We strongly recommended that you remove the batteries during the off season and replace them with fresh batteries at the start of each season.