




# How-to-Use Chimfex®

Chimfex is easy to activate and easy to use! Simply follow the instructions below.

## Directions for Use


Before activating, stand in front of fireplace or wood-burning heater. Hold Chimfex at the base so it extends over the fireplace hearth or fireproof stove board.

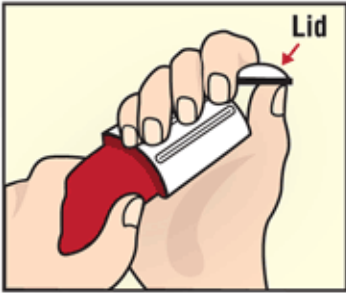

**1.** Remove top lid to expose scratch surface on the cap.



**2.** Twist and remove the cap to expose black button.

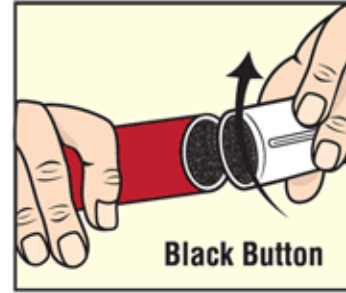

**3.** Hold away from face while activating Chimfex by lightly scratching black button with the cap.



**4.** Immediately drop **ALONGSIDE** the fire – not directly in the fire.



### For Fireplaces

- Activate Chimfex directly in front of fireplace according to the directions above.
- Drop Chimfex **IMMEDIATELY** inside the fireplace **ALONGSIDE** the fire – not directly in the fire.
- Reduce draft as much as possible by closing fireplace doors or covering the fireplace opening with a non-flammable material, leaving the flue damper open.
- The natural draft will draw the fumes up the flue and extinguishes\* the chimney fire.



### For Wood-Burning Heaters

- Activate Chimfex directly in front of heater according to the directions above.
- Drop Chimfex **IMMEDIATELY** into stove **ALONGSIDE** the fire – not directly in the fire.
- Close air inlet controls, leaving the flue damper open.
- The natural draft will draw the generated fumes up the flue and extinguish the chimney fire.

**Note:** Chimney fires can re-ignite. Larger flue systems may require more than one Chimfex stick. We recommend keeping an additional Chimfex on hand.

\*This device is not approved or permissible for use as an alternative for fire extinguishers in any building where fire extinguishers are required by law, ordinance or fire marshal regulation.